SAMSUNG

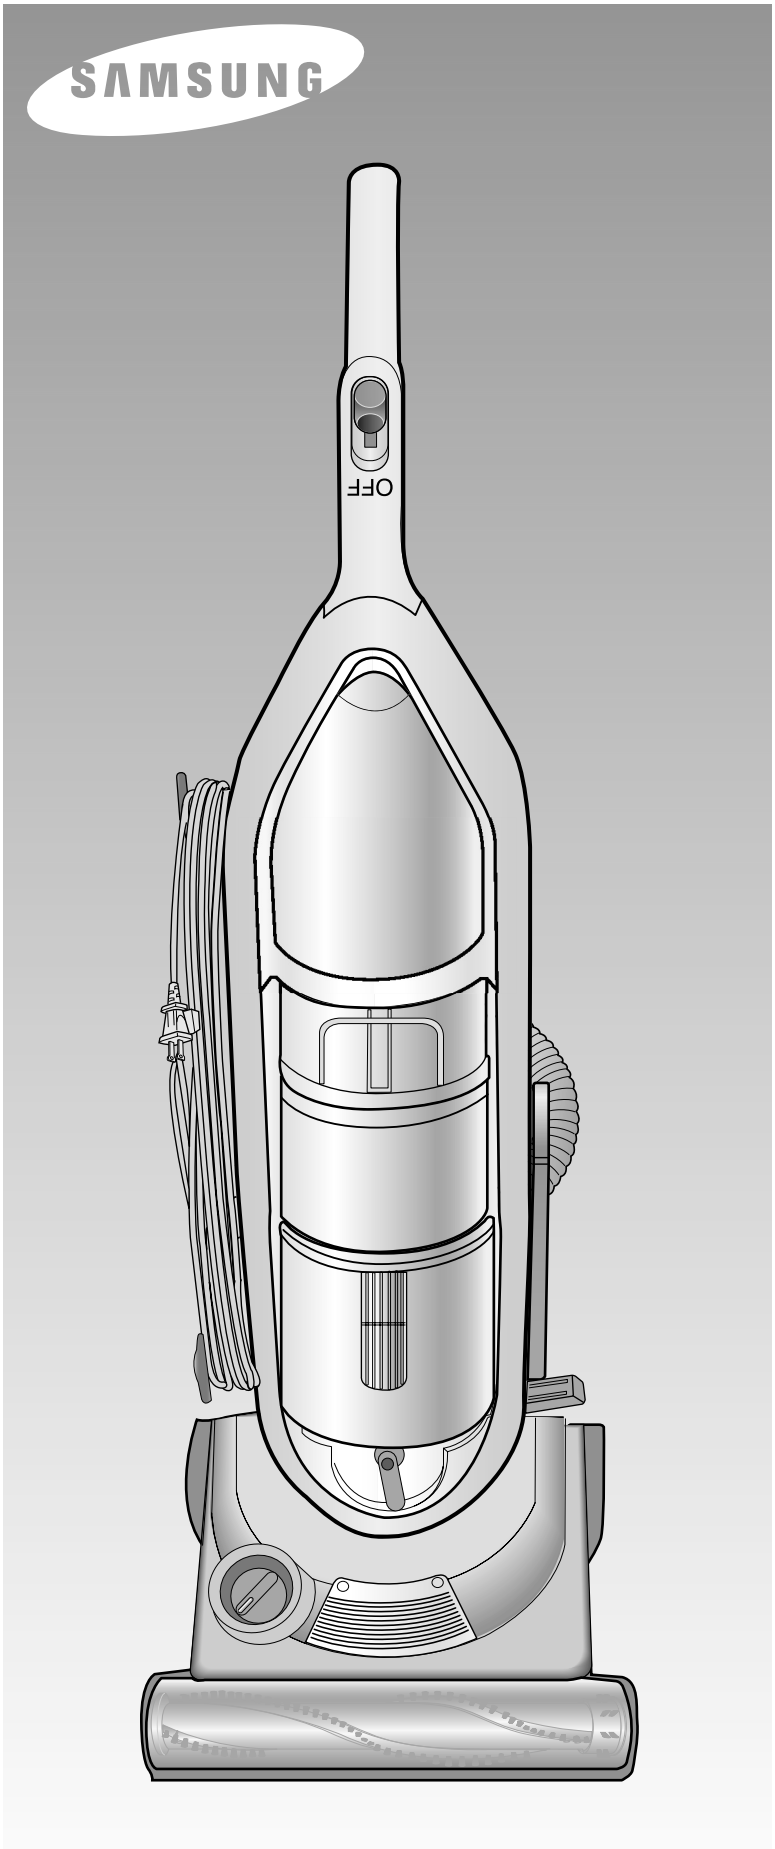

EN

Vacuum Cleaner

SU-8500 Series

FOR HOUSEHOLD USE ONLY

Operating Instructions

IMPORTANT SAFETY INSTRUCTIONS 2
VACUUM CLEANER DISCRIPTION 3
VACUUM CLEANER ASSEMBLY.....4
- CHECKING PARTS.....4
- ATTACHING HANDLE TO CLEANER 4
- ATTACH HANDLE TO DIRTCUP 4
- ATTACHING THE HOSE AND TOOLS.....5

OPERATION.....6
- POWER CONTROL.....6
- HANDLE RELEASE.....6
- BRUSH ROLL SWITCH 6
- CIRCUIT BREAKER.....7
- POWERFOOT HEIGHT ADJUSTMENT 7
- EDGE CLEANING FEATURE 7
- CLEANING TOOL ATTACHMENTS 7
- POWER CORD ARRANGEMENT 8
- TRANSPORTING CLEANER.....8
- CARRYING CLEANER 8

MAINTENANCE 9
- DIRT CUP FULL OR FILTER CLOGGED INDICATOR.....9
- CLEANING DIRT CUP.....9
- CLEANING THE CASE FILTER 9
- CLEANING THE EXHAUST HEPA FILTER 9
- CHECK ROTATING BRUSH AND DRIVE BELT10
- REPLACE DRIVE BELT 10
- CLEANING CLOGS 11
- HEADLIGHT REPLACEMENT 11
- REPLACE AGITATOR BRUSHROLL.....12
- REPLACE BELT.....12

OPTIONAL ACCESSORIES 13
TROUBLE SHOOTING.....14

※ The design and specification may be different depending on the models.

DJ68-00239B REV(0.0)

Important Safety Instructions

Thank you for purchasing a Samsung vacuum cleaner. When using an electrical appliance, basic precautions should always be followed, including the following:

PLEASE READ ALL WARNINGS AND INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER.

WARNING: To reduce the risk of fire, electric shock, or injury:

- Do not leave vacuum cleaner unattended when it is plugged in.
- Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow children to operate vacuum cleaner or use as a toy.
- Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug.
- If vacuum cleaner is not working as it should, or has been dropped, damaged, left outdoors or dropped in water, take it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull the cord around sharp edges or corners. Keep cord away from heated surface.
- Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord.
- Do not handle vacuum cleaner or plug with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair and anything that may reduce air flow.
- Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not use without dirt cup or filters in place. Empty cup and clean filter frequently when picking up very fine materials such as powder.
- Turn off all controls before unplugging vacuum cleaner.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible materials such as gasoline or fine wood standings or use in areas where they may be present.
- Store your vacuum cleaner indoors in a cool, dry area.
- Avoid picking up hard, sharp objects with the cleaner, they may damage the cleaner.
- Always turn off this appliance before connecting or disconnecting the hose, removing the bottom plate for maintenance.
- Use only on dry, indoor surfaces, never change the plug in any way.
- Do not modify the polarized plug to fit a non-polarized outlet or extension cord.
- Do not touch the brush roller when it is rotating.
- Keep suction away from your face when using nozzles and pipe.
- Do not pull the power cord around sharp corners and do not allow it to become trapped.
- Unplug before connecting turbine nozzle.(only using turbine-brush model)

SAVE THESE INSTRUCTIONS FOR FUTURE USE.

THIS VACUUM CLEANER HAS A POLARIZED PLUG.

To reduce the risk of electrical shock, this appliance has a polarized plug (one blade wider than the other.) This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a proper outlet.

Vacuum Cleaner Description

Assembled Vacuum Cleaner Parts

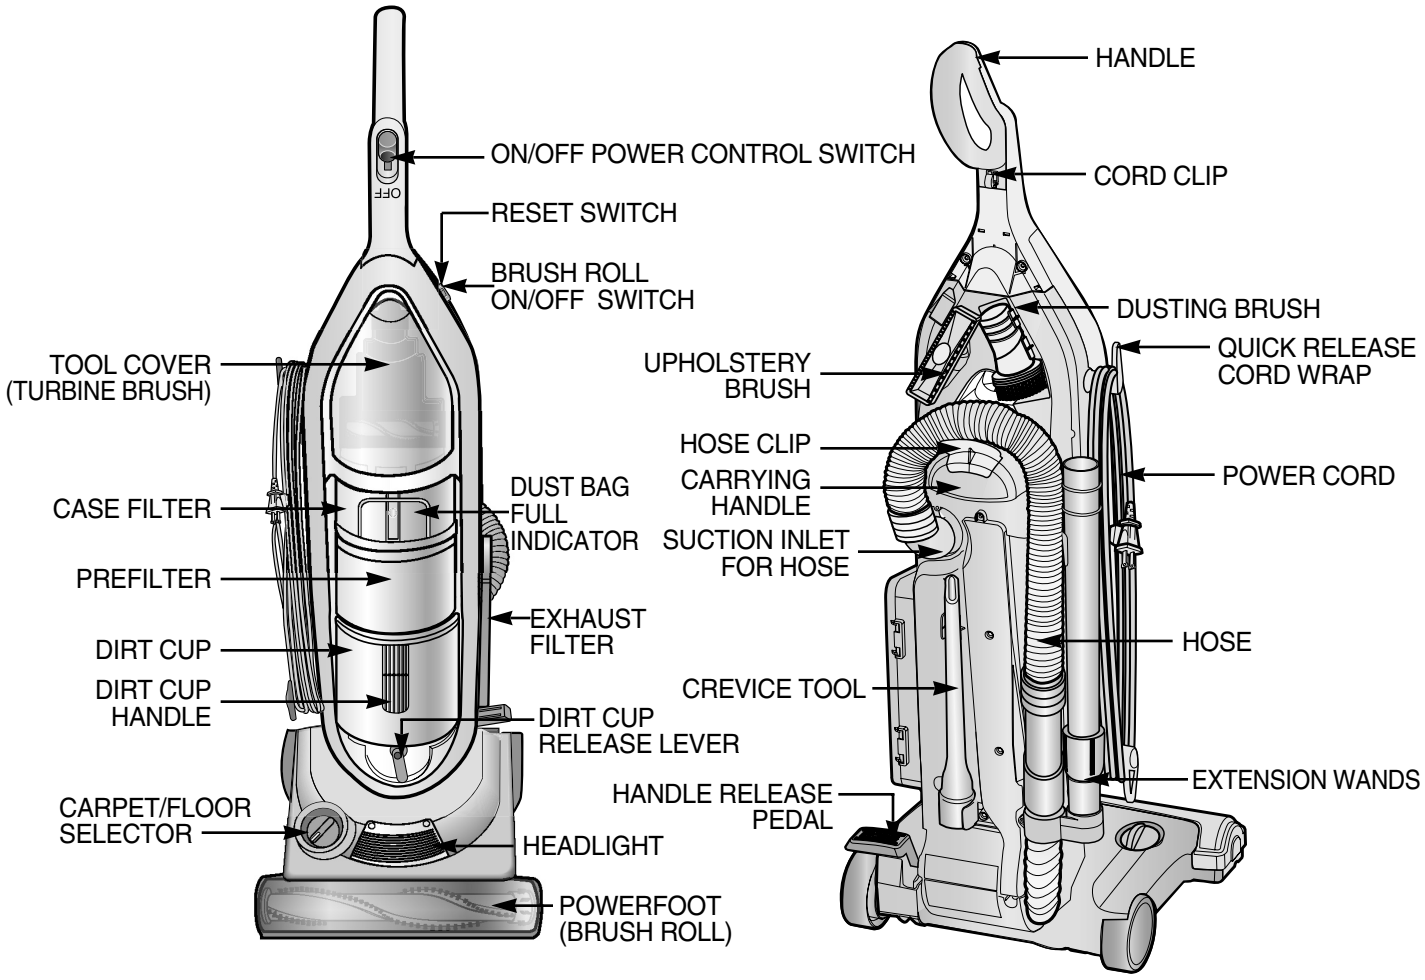

Front **Back**

DESCRIPTION	MODEL		
	SU8583	SU8563	SU8543
HANDLE	LOOP	STICK	STICK
EXHAUST FILTER	HEPA	HEPA	MICRO
EXTENSION WANDS	TELESCOPIC	TELESCOPIC	FRICTION
TURBINE BRUSH	YES	YES	NO
TOOL COVER	YES	YES	NO

Vacuum Cleaner Assembly

Checking Parts

You should have the following items when you unpack your vacuum cleaner:

A. Owner's manual
B. Handle section(with 4 screws)
C. Hose
D. Extension wands (Telescopic, Friction)
E. Crevice tool
F. Cleaner body
G. Powered hand tool (Turbine Brush)
H. Dusting Brush
I. Upholstery Brush (Furniture nozzle)

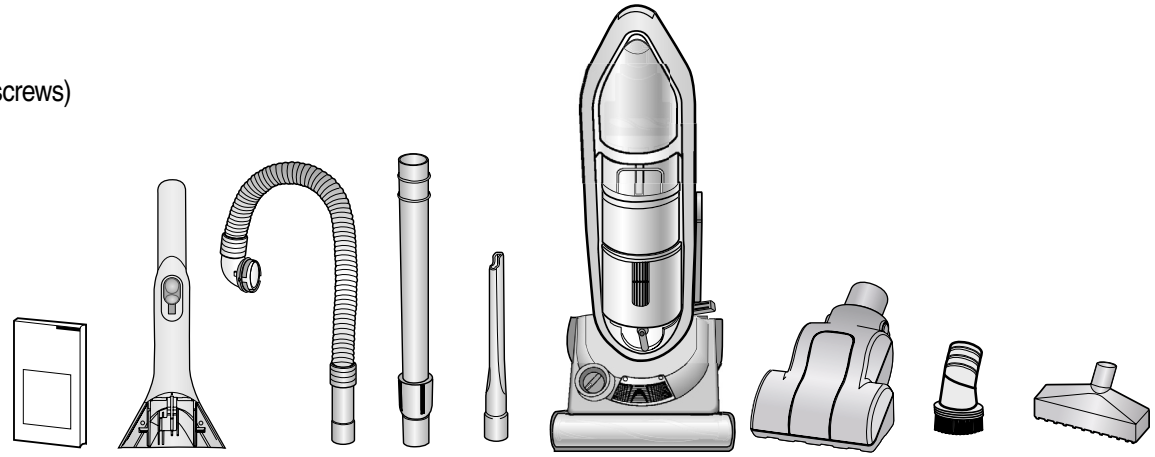

Attaching Handle to cleaner

1 Stand the vacuum upright and slide the base of the handle firmly into the grooves at the top of the vacuum body.

2 Check to be sure the handle is fitted to the cleaner body. If there is a gap in front, continue to push firmly until the handle is flush.

3 Insert the two screws provided into the existing holes. Tighten the screws securely with a screwdriver. Before securing the handle, please check that the handle is fitted to the vacuum body and there's no gap between them. If there is a gap or loosen the screw, cleaner won't be turned on.

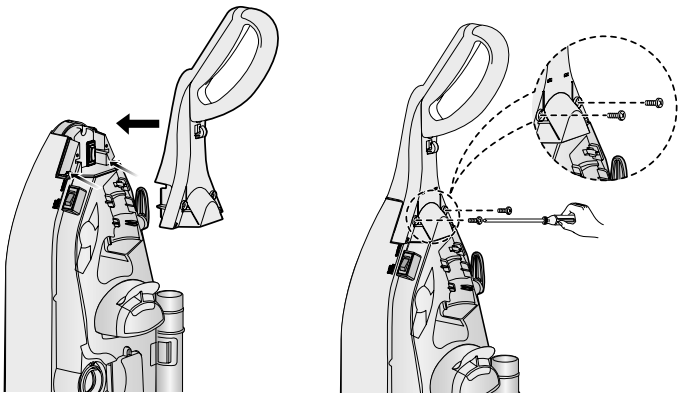

Attach Handle to Dirt cup

The dirt cup assembly consists of the following parts;
* Dirt cup (A)
* Handle (B)

1 Unlock the dirt cup from the cleaner body.

2 Insert the dirt cup handle into the dirt cup as shown. Press firmly until it locks in place.

3 Insert the dirt cup into the cleaner body and lock.

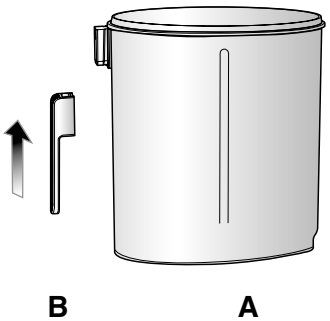

Vacuum Cleaner Assembly

Attaching the Hose and Tools

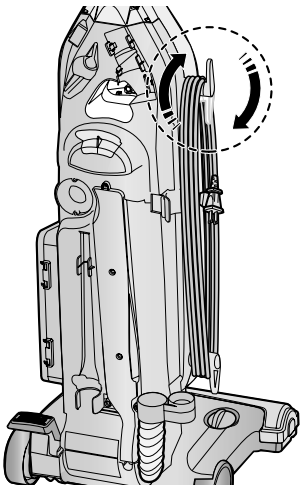

1 Wrap the cord around hooks for storage. The top hook rotates right or left for easy cord release.

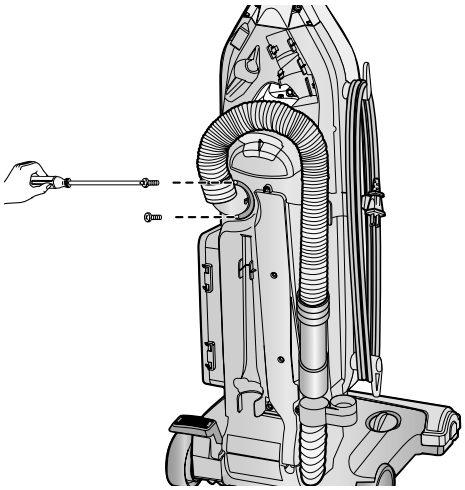

2 Attach the hose with two screws from the assembly packet. Tighten securely with a screw driver.

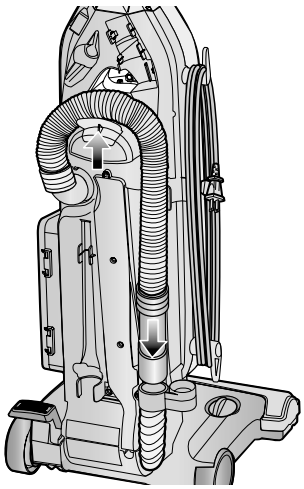

3 Snap the hose into the hose clip as shown.

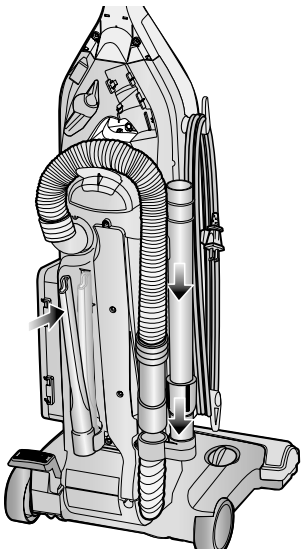

4 Slide the extend wand into the storage clip. Insert the crevice tool into the nook.

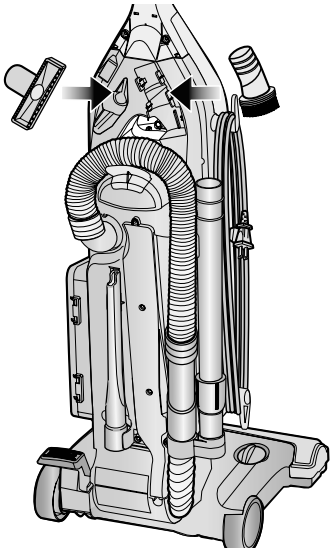

5 Snap in the Dusting brush and insert uholstery brush into the storage clip as shown.

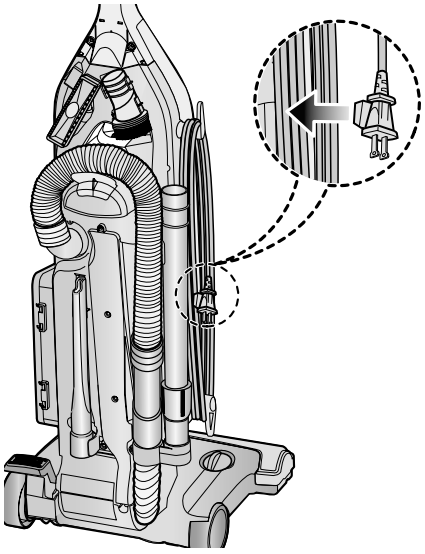

6 Loop power cord around cord wraps on side of cleaner. Then clip molded plug to power cord to secure.

Operation

Power Control

The power control slide switch on the front of the cleaner turns the vacuum on and off. This switch also allows you to control the cleaning power.

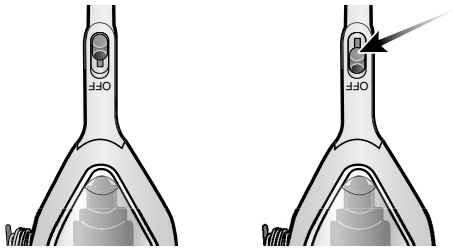

1 Plug cord into electrical outlet.

2 To turn the vacuum cleaner on, slide the power switch up. To turn it off, slide the switch down. The headlight turns on when in use.

Handle Release

Select the desired angle of the cleaner using the handle release pedal. The handle of your cleaner has three positions.

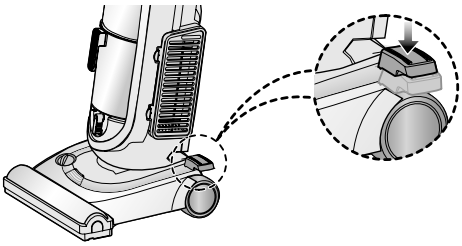

1 Step on the handle release pedal on the back of the cleaner base.

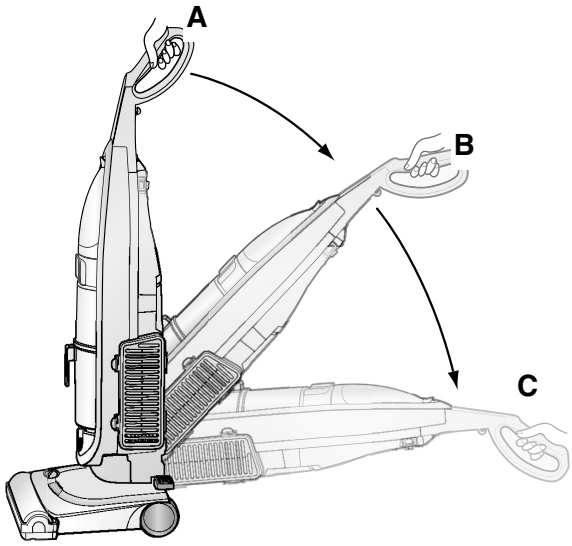

2 Raise or lower the handle and release the pedal.

A. Upright position:
For storage and elevated cleaning with cleaning tools.

B. Middle position:
For general operation on carpet and floors.

C. Low position:
Use for reaching under low furniture, step on handle release lever to lower handle.

Brush roll switch

Turn brush roll switch off to clean hard surface floors.
Turn brush roll switch on to clean carpet and rugs.
The brush rolls will automatically turn off when the handle is in the upright position.

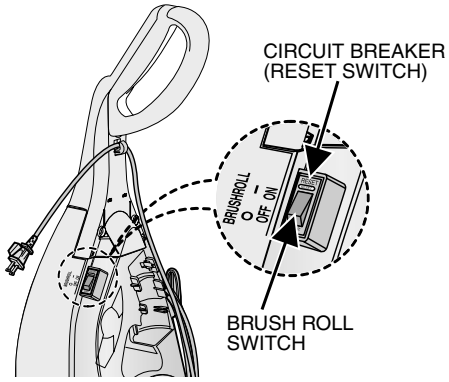

Operation

Circuit Breaker

The Circuit breaker turns off the brush rolls if there is an obstruction in them. When tripped, the circuit breaker button(RESET BUTTON) will pop up, and the brush roll control button will light up.
The brush rolls will not turn, but the suction motor will continue to run. To reset the breaker, turn cleaner off and unplug it, clear obstruction, press circuit breaker button down. Turn cleaner ON and continue cleaning.

Powerfoot Height Adjustment

1 Place Handle in Upright Position.

2 Turn Height Adjustment Knob to desired setting.

Lowest Setting - For bare floors.
Medium Settings - For short and medium pile carpets.
Highest Setting - For plush pile carpet.

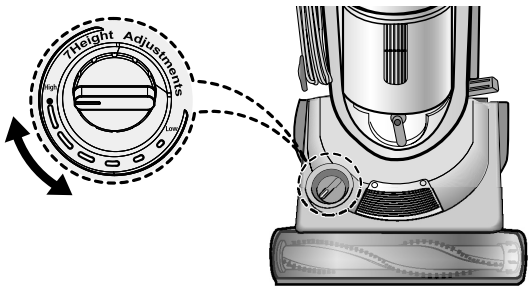

NOTE : For optimal cleaning performance, adjust to the lowest practical setting. If your cleaner is difficult to push, adjust to the next higher setting.

Edge Cleaning Feature

The Edge Cleaning Feature helps the cleaner to clean edges of rugs and floors effectively, allowing suction to reach against walls and near furniture.

Cleaning Tool Attachments

Attachment tools can be used to clean furniture, drapes, stairs, or in corners. Place the vacuum on the floor with the handle in the upright position while using attachment tools. Do not place the vacuum on top of furniture or steps as the brushroller may cause damage.

1 Unhook hose (with cleaning tools attached) from the rear of the vacuum cleaner.

2 Place desired tool on end of narrow wand. Press firmly and twist to connect the tool to the wand.

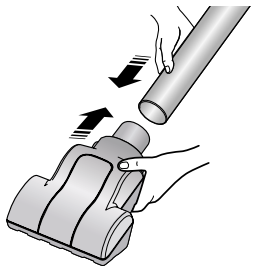

A. Dusting Brush:
Use for hardwood furniture, table tops, books, lamps.

B. Crevice tool:
Use in corners, on stairs, baseboards, and behind furniture.

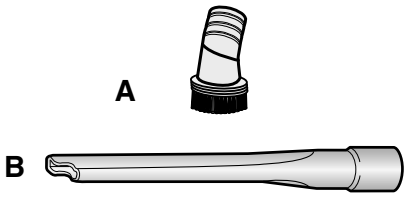

Operation

C. Extension Wand:
Use with desired attachments and narrow wand for a longer reach.



D. Turbine-Brush:
Use for upholstered furniture carpeted stairs and hard-to-reach places.

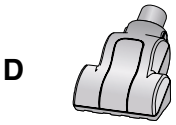

E. Upholstery Brush:
Use for upholstered furniture, draperies, mattresses, clothing, automobile interiors, and carpeted stairs.



Power Cord Arrangement

1 Turn vacuum cleaner off.

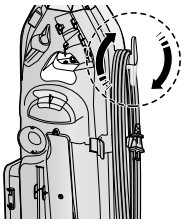

2 Unplug power cord by grasping the polarized plug and disconnect from outlet.

3 Loop power cord around cord wraps on side of vacuum cleaner.

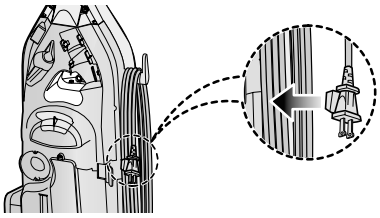

4 Clip molded plug to power cord to secure.

Cord Clip

For easier handling while Vacuuming, hook the power cord onto the power cord clip.

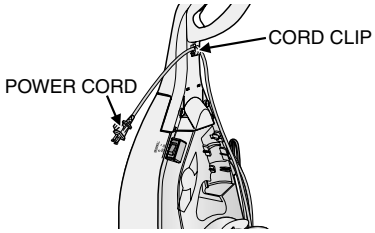

Transporting Cleaner

Put handle is upright position.
Tilt cleaner back on rear wheels.
Push forward.

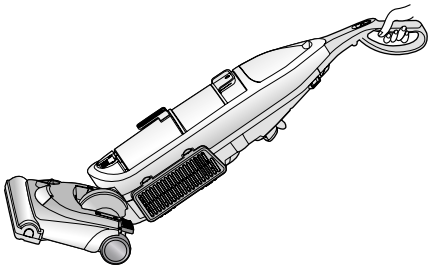

Carrying Cleaner

Use the carrying handle to lift the cleaner.

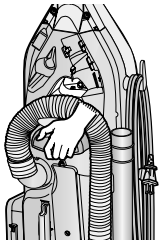

Maintenance

Dirt-Cup Full or Filter clogged Indicator

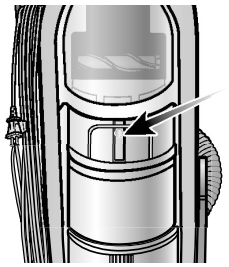

The Dirt-Cup Full Indicator on the front of the vacuum shows a red or green display. When the Dirt-Cup display is green, the Dirt-Cup is not yet full or the filter is not clogged. When the indicator
turns to red, the Dirt-Cup needs to be emptied or the filter needs to be cleaned.

If the display is still red after emptying the dust container, turn the cleaner off to see if the hose, tube, or nozzle is clogged .

Cleaning Dirt cup

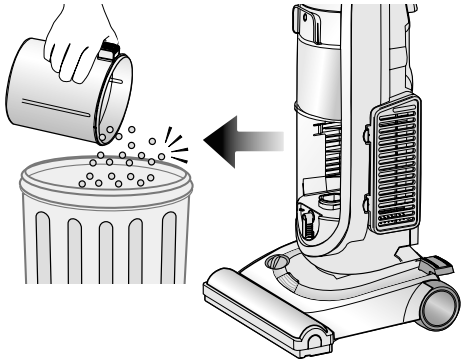

1 Unplug the Cleaner from electrical outlet.

2 The Dirt cup can be reached by removing the Dirt Container, reaching underneath the Upper Tank and turning the rim of the Filter Frame to unlock. Pull straight down to remove. Brush the dirt off the Louvers and Dirt cup.

3 The foam Upper Tank Filter may be removed and hand washed in cold water with mild detergent. Rinse well then air dry throughly before replacing.

Cleaning the Case-Filter

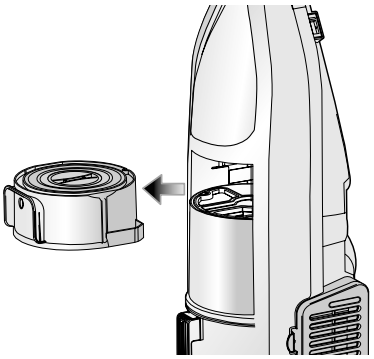

1 Unplug the Cleaner from electrical outlet.

2 The Case-Filter assembly can be reached by pulling the Case-Filter assembly from the cleaner.

3 Remove the cover from the Case-Filter, and the foam may be removed and hand-washed in cold water with mild detergent, then air dried.

4 Reposition Filters when completely dry.

Cleaning the Exhaust HEPA Filter

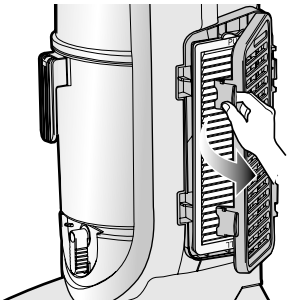

1 Unplug the Cleaner from electrical outlet.

2 The Exhaust HEPA Filter assists in the filtration process to return clean air to the room. It is located behind the door on the side of the cleaner. If the filter becomes dirty open the door, remove the filter clean. To remove this filter, open the door on the side of the cleaner, grasp filter and pull it straight out.

3 Reposition the exhaust filter, then lock the door.

Maintenance

Check Rotating Floor Brush and Drive Belt

1. Unplug cleaner from electrical outlet.
2. Place handle in Low position and turn vaccum cleaner over so bottom side is up.
3. Remove the eight screws as shown with a screwdriver.
4. Turn over the cleaner again, and lift the Cover-Brush off.
5. Remove the eight screws, and lift the Brush Cover off.
6. Grasp Rotating Floor Brush at both ends and lift.
7. Clean strings, hair and other debris from Rotating Floor Brush, paying particular attention to brush ends.
8. Clean strings, hair and other debris from Motor Pulley and Drive Belt areas.
9. Check Drive Belt carefully for wear, cuts or stressed areas.
10. Check Air Passageway for obstructions. Remove debris from this area.

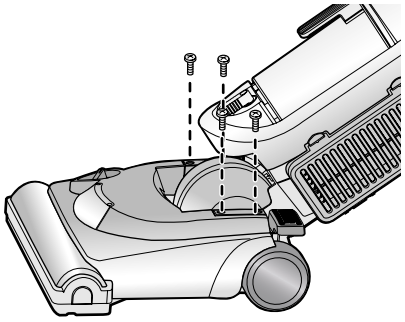

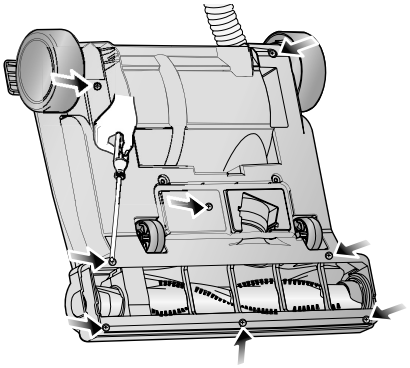

Replace Drive Belt

1. Unplug cleaner from electrical outlet.
2. With Rotating Floor Brush removed from vaccum cleaner(Step1-6 of Check Rotating Floor and Drive Belt) grasp old Drive Belt and remove from Motor pully. Discard old Drive Belt.
3. Place new Drive Belt over motor pulley and stretch other end over rotating Floor Brush in the space between the bristles.
4. Place ends of rotating Floor Brush down into slots on sides as shown.
5. Turn rotating Floor Brush by hand several times in direction of motor pulley, if properly installed, Drive Belt will center itself.
6. Reposition Brush cover and eight screws. Tighten screws securely. Snap end of Brush cover into place.

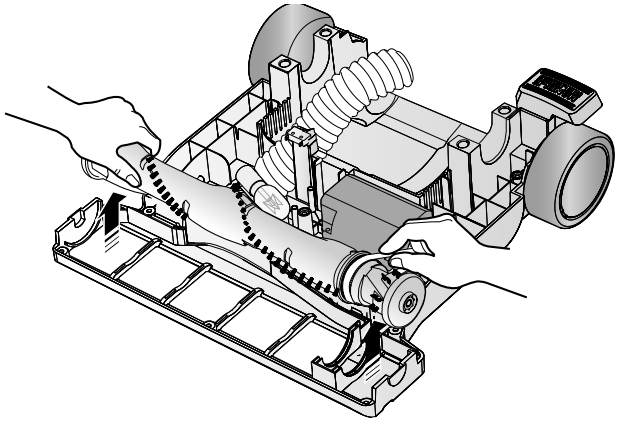

Maintenance

Clearing Clogs

Low suction or poor pickup may be due to a clog in the vaccum cleaner. If you notice a change in the sound of the motor or a reduction in the spinning action, check for clogs.

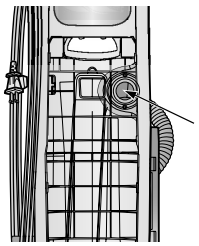

1. Unplug cleaner from electrical outlet.
2. Empty Dirt Cup.
3. Check Case filter for build up or clogs.
4. Remove the Case filter and check the suction inlet for a clog.

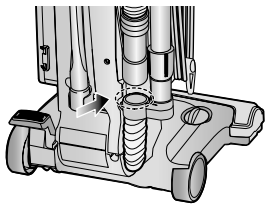

5. Grasp the Quick Reach Handle and lift Hose Wand to separate from the suction opening. Check for a clog in the Base, the Wand or the Hose.
6. Remove the screw attaching the Hose Wand Base to the vaccum. Straighten the Hose Wand Base and unclog with long, narrow object.

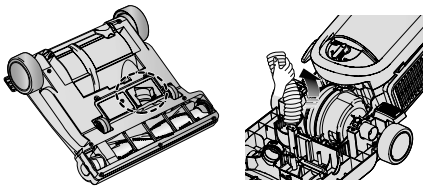

7. Turn the vacuum cleaner off and unplug it. Remove the brush cover, check the air passageway for obstructions. Remove debris from this area. Reposition brush cover and eight screws. Tighten screws securely, snap end of brush cover into place.

Headlight Replacement

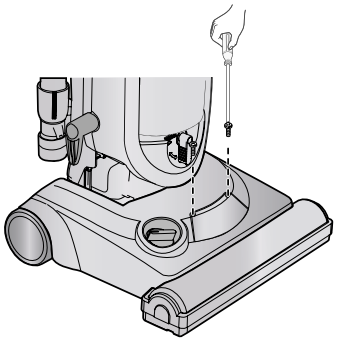

1. Disconnect cleaner from electrical outlet.
2. Unscrew the two screws on window lamp. then lift window lamp off.
3. Pull old bulb straight out of socket. Push new bulb straight into socket until locked in place.
4. Place tabs on window lamp into slot. Press on window lamp and secure other tab.

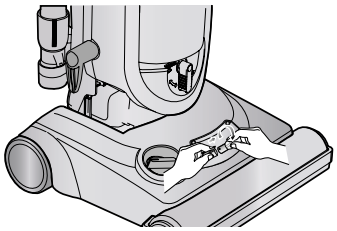

5. Replace and tighten two screws.

Maintenance

Turbine Brush

*Replace Agitator brush roll

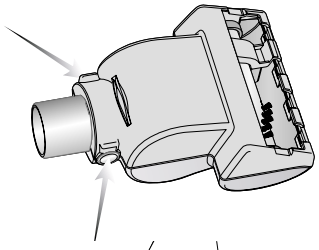

1 Remove tool from hose and turn it so bottom face up. Push up the hook on either side of tool and remove bottom plate.

2 Remove agitator including end plates and discard.

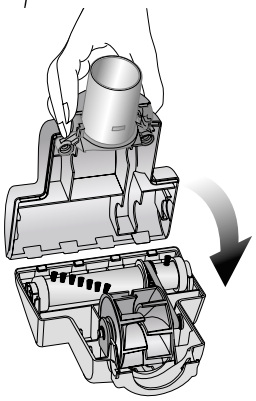

3 Inspect belt to ensure that it is in good condition, if belt is cracked, gouged, or brocken. Replace it(see following section).

4 With curved ends down, slide end plates of brush roll into slots on tool.

5 To replace bottom plate, insert the four tabs on edge of bottom plate into slots on front of tool. Pivot bottom plate down and snap closed.

*Replace belt

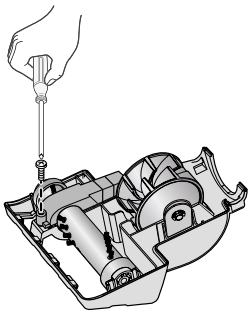

1 Grasp turbin and pull firmly to remove.

2 Remove a screw, and lift the cover belt off.

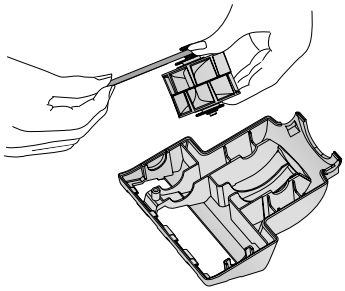

3 Remove belt from turbin pulley. Replace with new belt.

4 With flat sides of turbin retainers pointing down, slide retainers into grooves in tool housing and snap into place.

5 Replace brush roll and bottom plate.

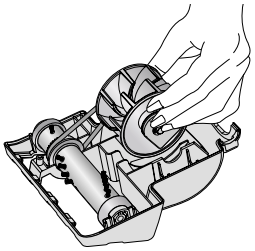

Optional accessories

For filters, belts or other parts, please contact your nearest SAMSUNG Dealer.
If your dealer does not stock these parts, you may order them by calling 1-800-SAMSUNG.

ITEM	PART DESCRIPTION	PART NUMBER
①	Drum Brush	DJ66-000298
②	Timing Belt	6602-001223
③	Lamp-Incandescent	4713-001068
④	Exhaust Filter(HEPA Filter)	DJ63-00338
⑤	Case Filter	DJ61-00576
⑥	Turbine Brush(Turbo-Brush)	DJ67-00285A
⑦	Telescopic wands	DJ62-00113A
⑧	Friction wands	DJ67-50203A
⑨	Crevice Pipe	DJ67-50202B
⑩	Dusting Brush	DJ67-00220
⑪	Upholstery Brush	DJ67-00280A

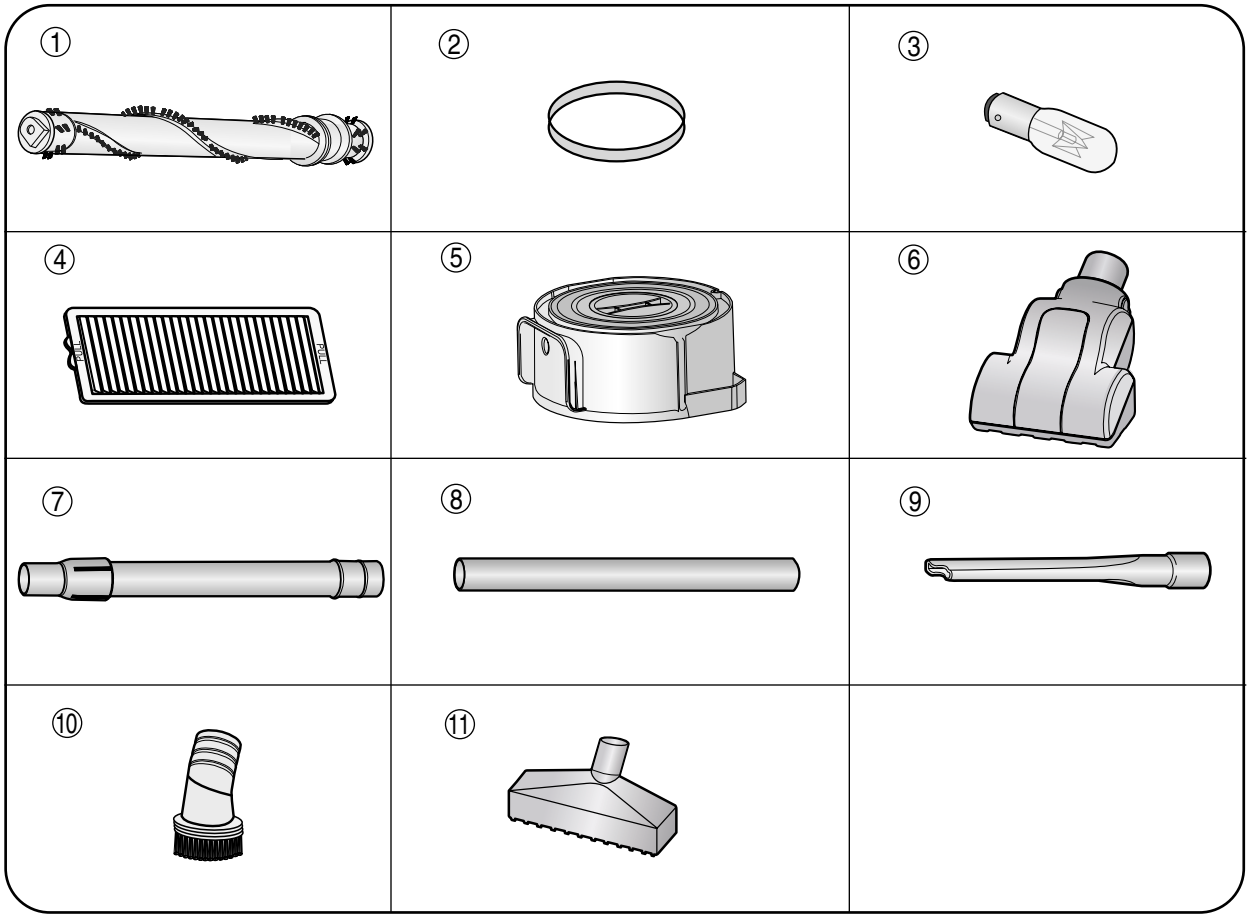

Troubleshooting

Check this list of possible problems and solutions before bringing your vacuum to a service center. If you have a problem you cannot solve, please call 1-800-SAMSUNG.

Problem	Possible solution
CLEANER WON'T TURN ON	
• Not firmly plugged in.	• Plug unit in firmly.
• No voltage in wall plug.	• Check fuse or breaker.
• Blown fuse or tripped breaker.	• Replace fuse or reset breaker.
• On/Off switch not turned on.	• Slide to on.
	• Tighten the screw of the handle.
CLEANER WON'T PICK UP	
• Circuit breaker tripped.	• Reset circuit breaker.
• Agitator brush rolls worn.	• Replace brush rolls.
• Dirt cup full.	• Empty dirt cup.
• Incorrect carpet height setting.	• Move nozzle control knob to lower settings.
• Blockage in air flow passage.	• Clear HEPA cartridge filter by eighter tapping the side of the dirt cup.
• Pre-filter clogged.	• Clean pre-filter.
• Dirt cup not properly installed.	• Position dirt cup properly.
• Filter assembly not assembled properly.	• Ensure that filter assembly is positioned properly.
• Blockage in hose.	• Clear blockage.
• Broken belt.	• Replace belt.
• Hose not inserted fully.	• Clean hose or nozzle area.
LIGHT WILL NOT WORK	
• Burned out light bulb.	• Replace light bulb.
ABNORMAL SOUND	
• Strange sound like air rushes	• Check for clogs.

SAMSUNG

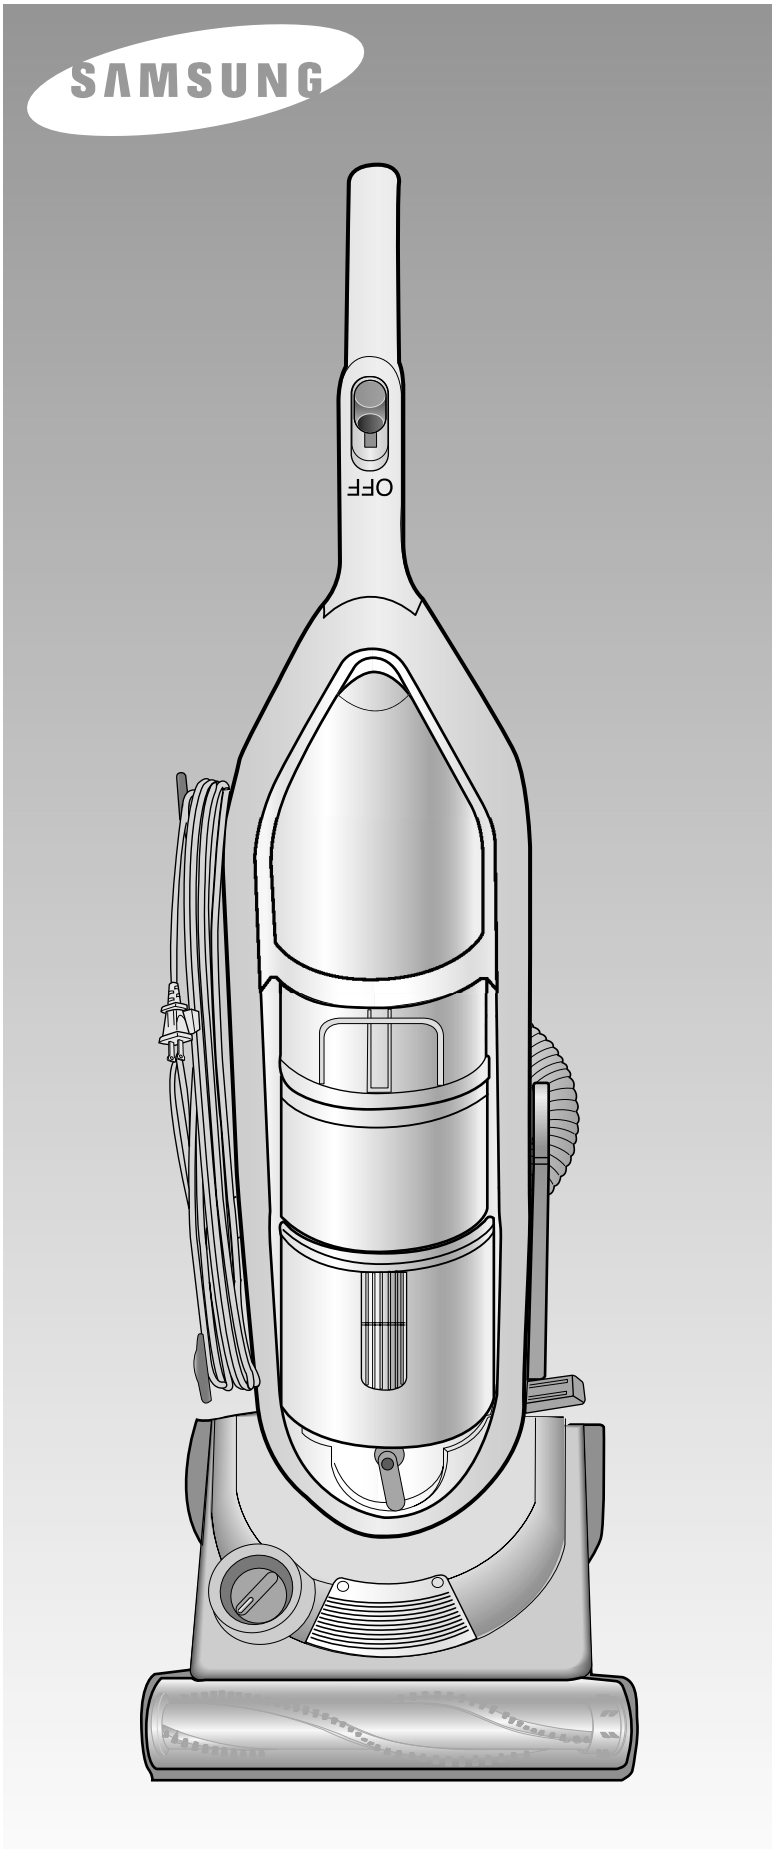

FR ASPIRATEUR

Séries SU-8500

Pour utilisation domestique seulement

INSTRUCTIONS

DIRECTIVES IMPORTANTES DE SÛRETÉ 2
DESCRIPTION DE L'ASPIRATEUR 3
ASSEMBLAGE DE L'ASPIRATEUR 4
VÉRIFICATION DES PIÈCES 4
ASSEMBLEMENT DE LA POIGNÉE À L'ASPIRATEUR 4
ASSEMBLEMENT DE LA POIGNÉE AU CONTENANT DE POUSSIÈRE .4
ASSEMBLEMENT DU BOYAU ET ACCESSOIRES 5
FONCTIONS 6
INTERRUPTEUR ARRÊT/DÉPART – VARIABILITÉ DE SUCCION.6
BOUTON D'INCLINAISON DE L'APPAREIL 6
INTERRUPTEUR DU ROULEAU 6
CIRCUIT 7
NIVEAUX D'AJUSTEMENT DU ROULEAU 7
NETTOYAGE À LA BORDURE 7
NETTOYAGE AVEC LES ACCESSOIRES 7
LA CORDE D'ALIMENTATION 8
MANOEUVRABILITÉ DE VOTRE ASPIRATEUR 8
TRANSPORTER VOTRE ASPIRATEUR.....8
ENTRETIEN 9
CONTENANT DE POUSSIÈRE PLEIN, INDICATEUR DU FILTRE BOUCHÉ9
NETTOYAGE DU CONTENANT DE POUSSIÈRE 9
NETTOYAGE DE LA CAGE DU FILTRE 9
NETTOYAGE DU FILTRE DE SORTIE D'AIR HEPA.....9
VÉRIFICATION DU ROULEAU ET DE LA COURROIE ..10
REMPLACER LA COURROIE.....10
OBSTRUCTIONS 11
REMPLACER L'AMPOULE.....11
REMPLACER LE ROULEAU 12
REMPLACER LA COURROIE.....12
ACCESSOIRES OPTIONNELS 13
PROBLÉMES.....14

✻ Le design et les spécifications peuvent être modifiées dépendamment des modèles.

DJ68-00239B REV(0.0)

DIRECTIVES DE SURETÉ IMPORTANTES

Lorsque vous utilisez un appareil électrique, certaines précautions doivent être exercées, incluant les suivantes :

LIRE TOUTES LES INSTRUCTIONS AVANT D'UTILISER L'APPAREIL.
CONSERVER CES DIRECTIVES.

WARNING: Pour réduire le risque d'un feu, décharge électrique ou blessure:

1. Utiliser cet appareil tel que décrit dans le manuel.
2. Ne pas laisser votre aspirateur sans supervision lorsqu'il est branché ou en fonction. Débrancher l'aspirateur après chaque usage et avant une réparation.
3. Mettre toutes les contrôles en position « off » avant d'arrêter l'aspirateur.
4. Débrancher l'appareil électrique avant de le nettoyer ou réparer.
5. ATTENTION : UNE DÉCHARGE ÉLECTRIQUE POURRAIT SE PRODUIRE SI UTILISÉ DEHORS OU SUR UNE SURFACE HUMIDE.
6. Cet appareil n'est pas un jouet. Une surveillance est nécessaire lorsque l'appareil est utilisé par ou près d'un enfant.
7. Ne pas utiliser si la corde ou fiche est endommagée. Si l'appareil ne fonctionne pas à pleine capacité, a été échappé, endommagé, laissé dehors ou plongé dans l'eau, apportez-le à un centre de service.
8. Ne pas tirer ou transporter l'aspirateur par la corde, utiliser la corde comme une poignée, fermer une porte sur la corde, ou tirer la corde autour d'une bordure tranchante ou coin aigü. Ne pas passer avec l'aspirateur sur la corde. Garder la corde loin des sources de chaleur.
9. Ne pas tirer sur la corde pour débrancher. Pour débrancher, tenir la fiche fermement et tirer.
10. Ne pas toucher la fiche ou l'aspirateur avec des mains humides.
11. Ne pas insérer aucun objet dans les ouvertures. Ne pas utiliser lorsqu'une ouverture est bouchée.
12. Garder les cheveux, vêtements, doigts, et toute autre partie du corps loin des ouvertures et pièces mobiles (brosse, poignée, etc.)
13. Ne jamais aspirer quelque chose qui est brûlant, ou qui dégage une fumée telle une cigarette, allumette, ou des cendres chaudes.
14. Ne pas aspirer des liquides inflammables ou combustibles tel de l'essence; et ne pas utiliser l'aspirateur près de ces liquides.
15. Ne pas utiliser l'aspirateur pour ramasser de l'eau ou aspirer une surface humide.
16. Ne pas utiliser l'appareil sans sac et filtres.
17. Soyez prudent lors du nettoyage des escaliers. Pour éviter des blessures ou dommages, l'appareil doit demeurer au pied des escaliers.
18. Utiliser seulement que les accessoires recommandés par le manufacturier.
19. Assurez-vous que l'aspirateur n'est pas en fonction avant de débrancher.

CONSERVER CES DIRECTIVES

Pour réduire le risque d'une décharge électrique, cet appareil possède une fiche avec des lames polarisées (une lame plus longue que l'autre). Cette fiche s'insère d'une seule façon dans une prise polarisée. Essayez d'insérer la fiche d'un côté et si cela ne fonctionne pas, essayez du côté opposé. Si cela ne fonctionne toujours pas, demander à un électricien qualifié d'installer la prise appropriée. Ne pas défier le but de la prise polarisée.

Description de l’aspirateur

Assemblage de l ’aspirateur

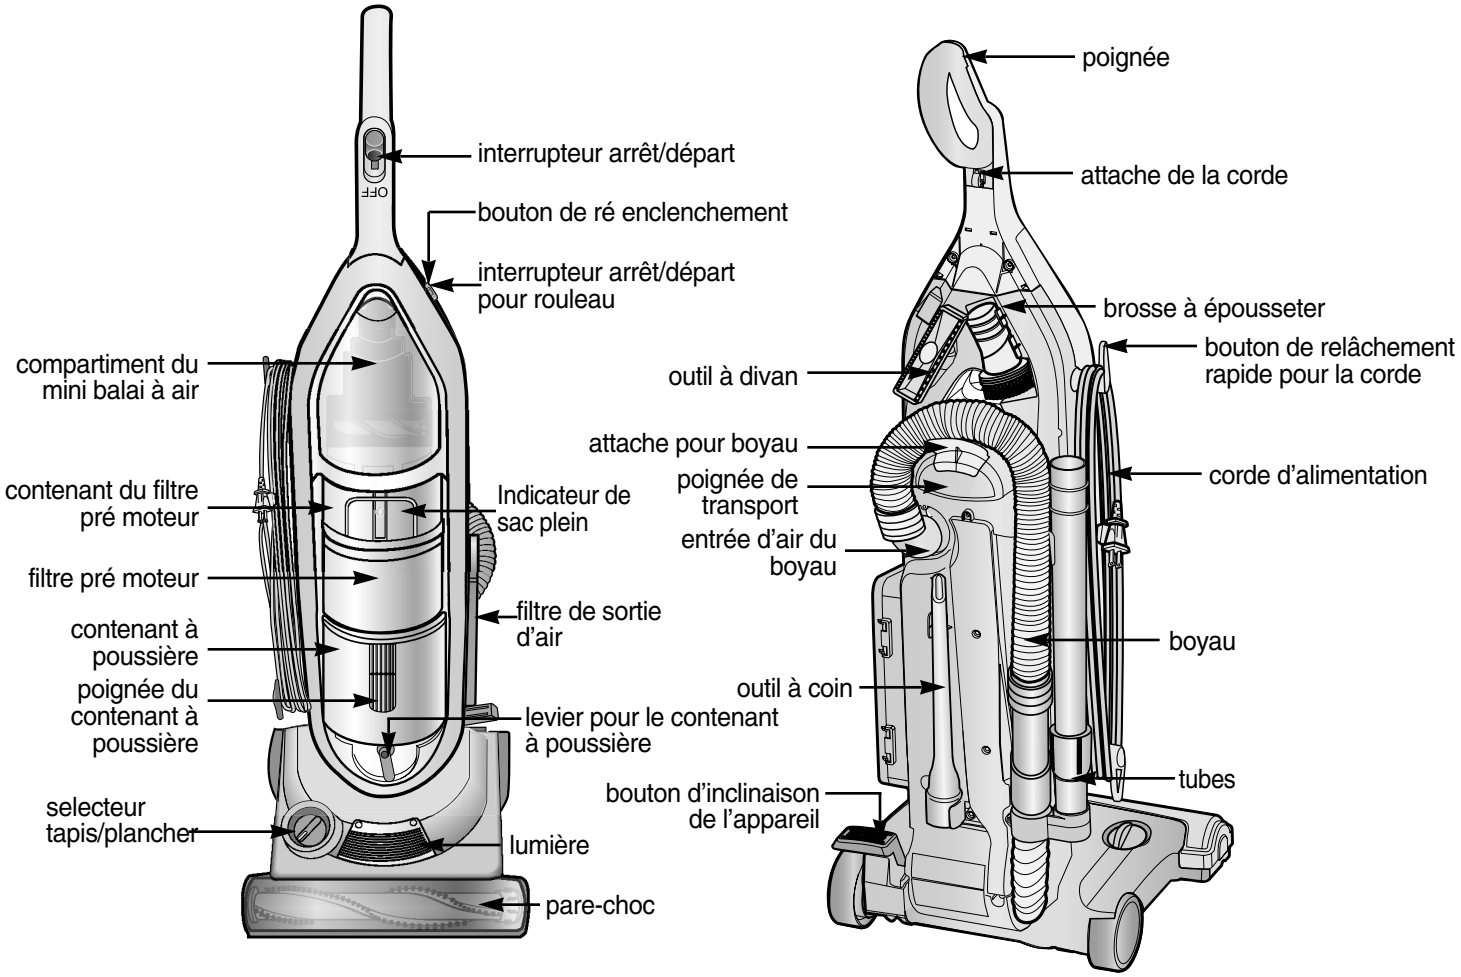

DESCRIPTION	MODEL		
	SU8583	SU8563	SU8543
Poignée	boucle	droite	droite
Filtre de sortie d’air	hepa	hepa	micro
Tubes	télescopique	télescopique	friction
Balai à air	oui	oui	non
Compartiment d’outil	oui	oui	non

Assemblage de l’aspirateur

Vérification des pièces

Vous devriez trouver ces articles dans la boîte :

A. Manuel d’instructions
B. Poignée avec 4 vis
C. Boyau
D. Tube (friction ou télescopique)
E. Outil à coin
F. Corps de l’aspirateur
G. Balai à air
H. Brosse à épousseter
I. Outil à divan

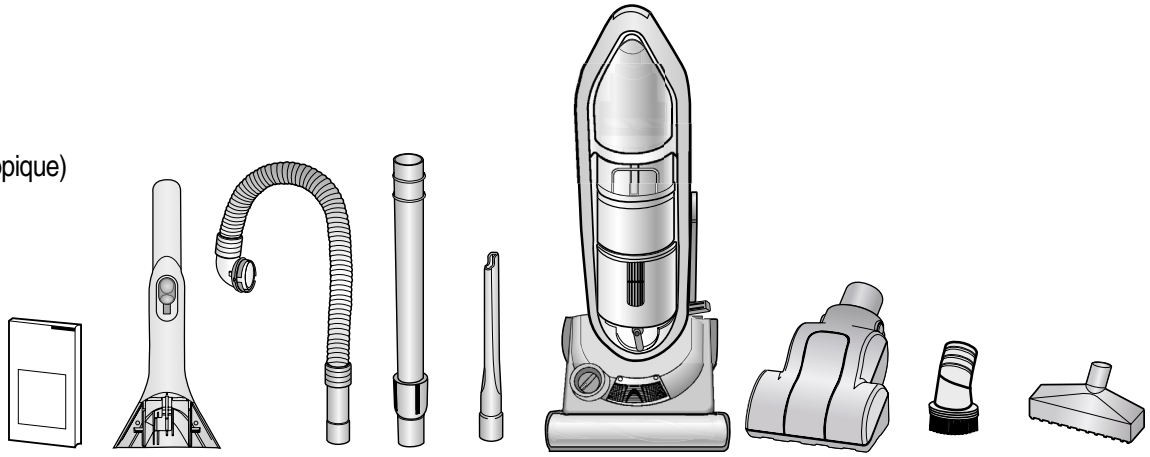

A **B** **C** **D** **E** **F** **G** **H** **I**

Assemblement de la poignée à l’aspirateur

1 placer votre aspirateur en position verticale et glisser la base de la poignée dans les rainures situées au haut du dos de l’aspirateur.

2 Assurez-vous que la poignée est placée contre le corps de l’aspirateur. S’il y a un espace à l’avant, poussez à nouveau jusqu’à ce que la base de la poignée soit bien en place.

3 Visser les deux vis à la base de la poignée au dos de l’aspirateur. Avant de visser, assurez-vous que la poignée est bien en place.

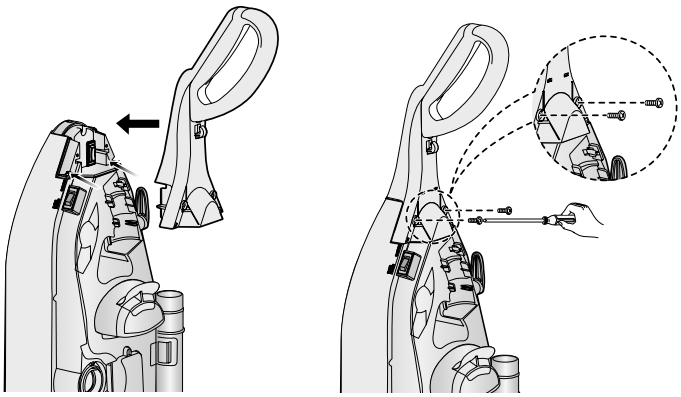

Assemblement de la poignée au contenant de poussière

Le contenant à poussière comprend les pièces suivantes :
* contenant à poussière (A)
* poignée (B)

1 Retirer le contenant à poussière du corps de l’aspirateur.

2 Insérer la poignée du contenant tel que montré. Appuyer fermement jusqu’à ce que la poignée se barre en place.

3 Insérer le contenant à poussière dans son compartiment.

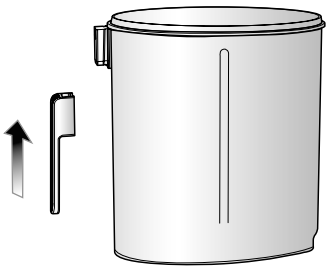

B **A**

Assemblage de l’aspirateur

Assemblement du boyau et accessoires

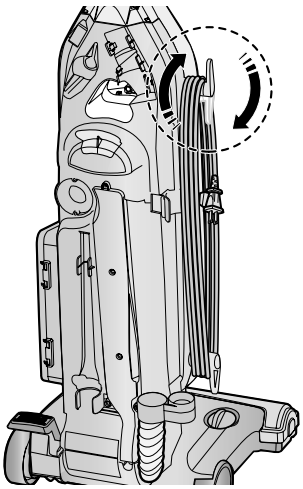

1 Enrouler la corde d’alimentation autour des attaches situées sur le côté de l’aspirateur. L’attache du haut pivote de gauche à droite pour relâcher la corde rapidement et facilement.

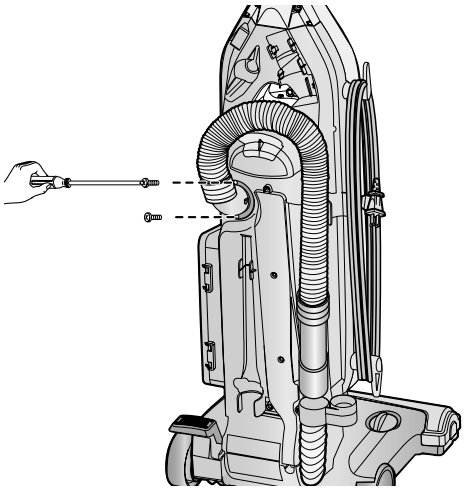

2 Attacher le boyau avec deux vis.

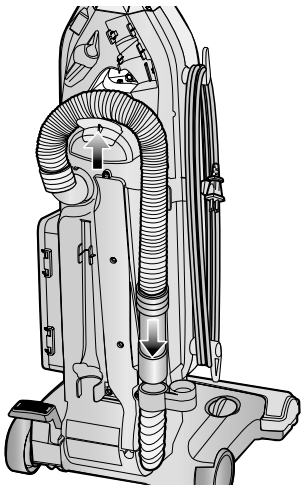

3 Insérer l’embout du boyau dans le support du bas de l’aspirateur.

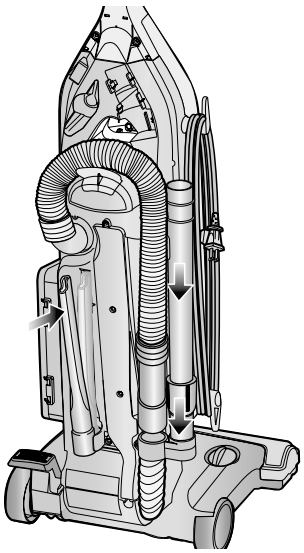

4 Insérer le tube dans son support, au côté du boyau. Insérer l’outil à coin dans le tube

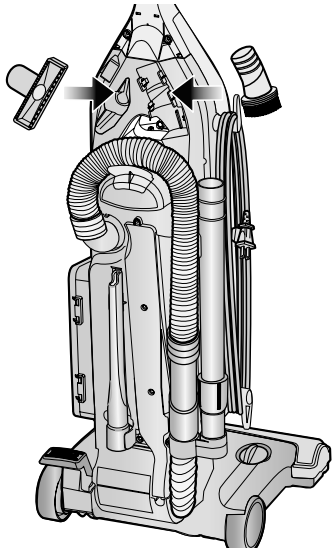

5 Insérer la brosse à épousseter et l’outil à divan tel qu’indiqué sur la photo.

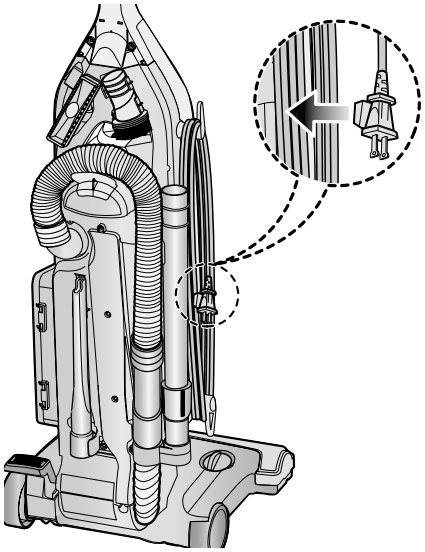

6 Enrouler la corde d’alimentation autour des attaches et accrocher la fiche électrique après la corde.

Fonctions

Interrupteur arrêt/départ – variabilité de succion

L'interrupteur arrêt/départ est situé au devant de l'aspirateur. Cet interrupteur offre la possibilité de régler la variabilité de succion.

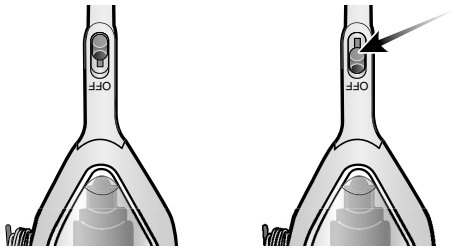

1 Brancher la corde d'alimentation dans la prise de courant.

2 Pour démarrer votre aspirateur, appuyer sur le bouton arrêt/départ. Même procédure pour arrêter l'appareil. La lumière s'allume automatiquement lorsque vous mettez votre aspirateur en marche.

Bouton d'inclinaison de l'aspirateur

Sélectionnez l'angle désiré pour nettoyer en utilisant le bouton d'inclinaison situé au bas à gauche.
Votre poignée offre 3 positions d'inclinaisons.

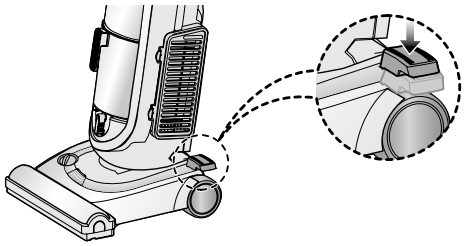

1 Appuyez sur le bouton d 'inclinaison situé au bas à gauche.

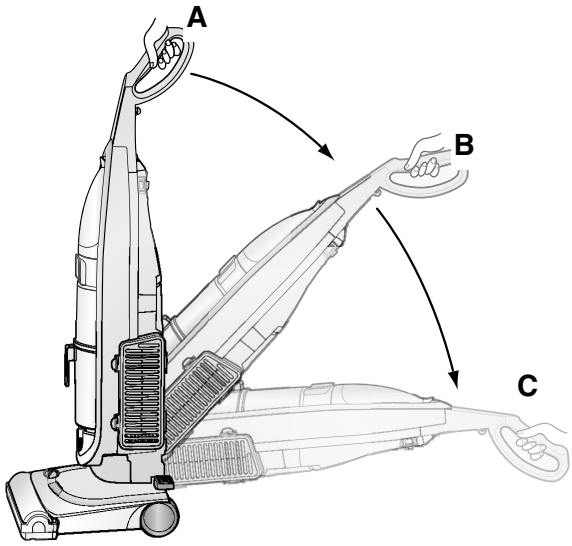

2 Saisez la poignée et laissez le bouton.

A. position verticale :
pour rangement ou nettoyage à élévation.

B. position inclinée :
nettoyage général sur un tapis ou plancher

C. position abaissée :
nettoyage sous des meubles, lits, etc.
Pour obtenir cette inclinaison, appuyer sur le bouton d'inclinaison.

Interrupteur du rouleau

Sélectionnez 'off' pour nettoyer une surface dure
Sélectionnez 'on' pour nettoyer le tapis
Le rouleau s'arrêtera automatiquement lorsque l'aspirateur sera en position verticale.

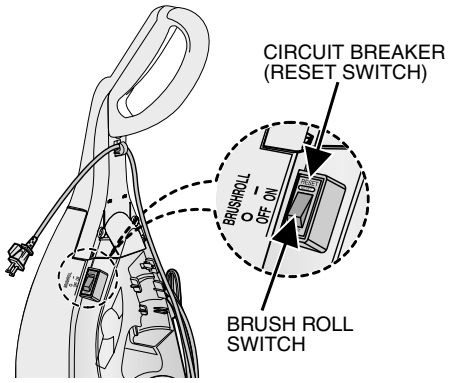

Fonctions

Circuit

Le circuit arrête le rouleau lorsqu'un objet l'obstrue. Le bouton du circuit sera soulevé et la lumière du rouleau indiquera l'obstruction. Le rouleau ne tournera plus mais le moteur de succion continuera. Arrêter l'aspirateur et débrancher, enlever l'obstruction, appuyer sur le bouton du circuit. Redémarrer l'aspirateur et continuer votre nettoyage.

Niveaux d'ajustement du rouleau

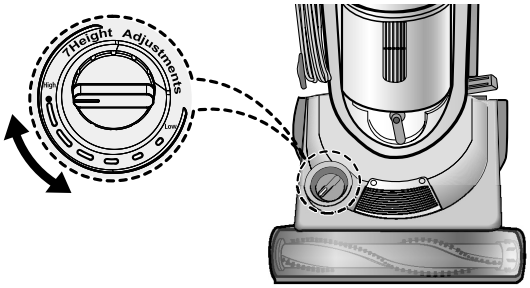

1 Placer votre aspirateur en position verticale.

2 Tourner le bouton d'ajustement à la hauteur désirée.

Plus bas niveau - pour plancher
Niveau mi-haut - tapis à poils courts ou moyens
Niveau élevé - tapis à poils longs

NOTE : pour un nettoyage plus performant, ajuster votre rouleau au niveau plus bas idéal.
Si vous avez de la difficulté à pousser votre aspirateur, élevé votre rouleau.

Nettoyage à la bordure

Votre rouleau nettoie tout près de la bordure du mur pour plancher, tapis ainsi que près des meubles.

Nettoyage avec les accessoires

Les accessoires peuvent être utilisés pour nettoyer les meubles, escaliers et les coins plus difficiles à atteindre. Placer votre aspirateur dans la position verticale lorsque vous utilisez les accessoires. Ne pas placer votre aspirateur sur des meubles ou tables ou escaliers car ceci posera une friction au niveau du rouleau qui pourrait causer des dommages.

1 retirer le boyau (pour l'usage des accessoires) à l'arrière au dos de l'aspirateur.

2 insérer l'accessoire désiré au bout du tube. Tourner l'accessoire au tube pour barrer.

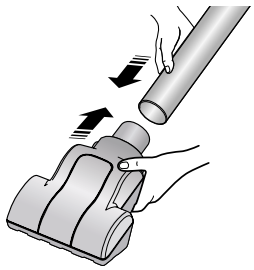

A. brosse à épousseter :
utilisée pour meubles, tables, livres..etc

B. outil à coin :
utilisé pour les coins plus difficiles à nettoyer, le long des murs

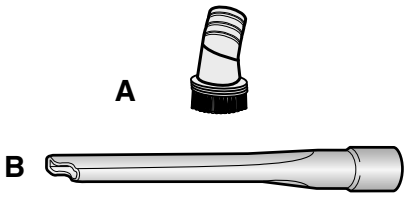

Fonctions

C. tube :
utilisé avec les accessoires de nettoyage

D. balai à air :
pour les divans, escaliers et endroits plus difficile à nettoyer

E. outil à divan :
utilisé pour divan, rideaus, matelas, linge, escaliers etc

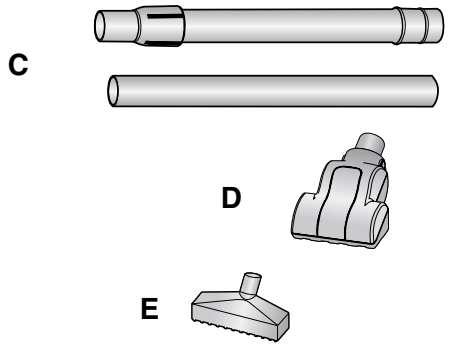

Corde d'alimentation

1 Placer votre aspirateur en fonction d'arrêt.

2 Débrancher votre aspirateur en tirant sur la fiche.

3 Enrouler la corde autour des attaches situées sur le côté de l'aspirateur

4 Attacher la fiche à la corde d'alimentation

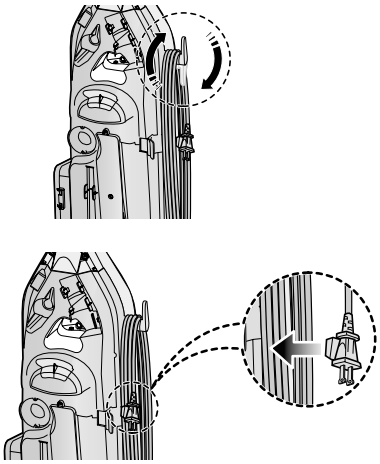

Attache pour corde d'alimentation

Lors de votre nettoyage utiliser l'attache sous la poignée pour accrocher votre corde. Ceci empêche la corde d'être dans votre voie de nettoyage.

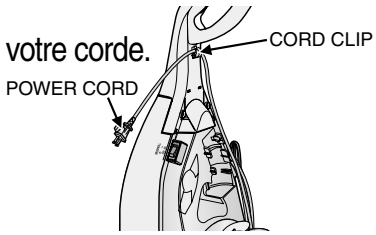

Manoeuvrabilité de l'aspirateur

Placer votre aspirateur en position verticale
Incliner l'aspirateur vers l'arrière pour quelle repose sur les roues arrière
Pousser vers l'avant.

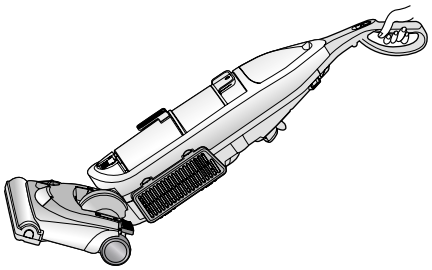

Transporter votre aspirateur

Utiliser la poignée de transport à l'arrière sous le boyau pour soulever l'aspirateur.

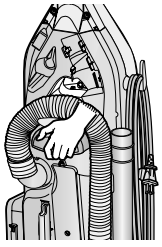

Entretien

Contenant de poussière plein, indicateur du filtre bouché

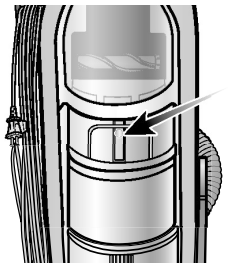

L'indicateur du contenant de poussière situé à l'avant de l'aspirateur comprend un indicateur en rouge ou vert. Lorsque l'indicateur est vert, ceci indique que votre contenant de poussière n'est pas plein ou le filtre n'est pas encore usagé. Si l'indicateur est rouge, il est maintenant temps de vider votre contenant ou le filtre doit être nettoyé.

Si l'indicateur demeure rouge après avoir vidé le contenant, arrêter votre aspirateur et vérifier si il y une obstruction au niveau du rouleau, boyau ou tube.

Nettoyer le contenant de poussière

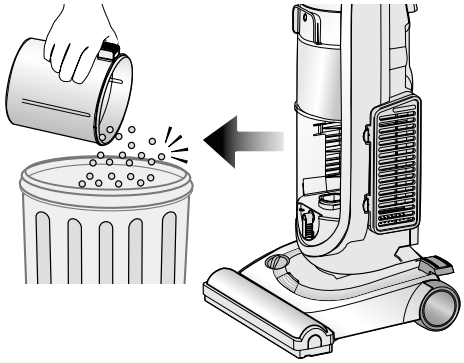

1 Débrancher votre appareil

2 Tirer sur le contenant du bas utilisant la poignée. Videz-le. Retirer la lamelle rouge (située dans la section du milieu du corps)en tournant lentement pour déloger. Nettoyer et replacer. Replacer le contenant de poussière.

Nettoyer la cage du filtre

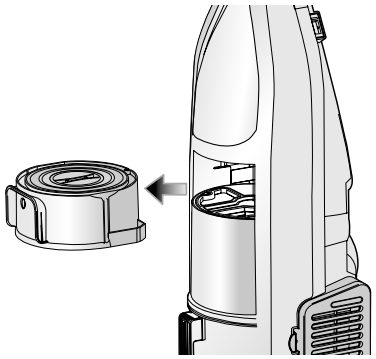

1 Débrancher votre appareil

2 le filtre rond en éponge dans la cassette comprenant l'indicateur de contenant plein peut être retirer et laver à la main avec de l'eau froide et un détergent léger. Bien rincer et laisser sécher à l'air avant de replacer.

Nettoyer le filtre de sortie d'air HEPA

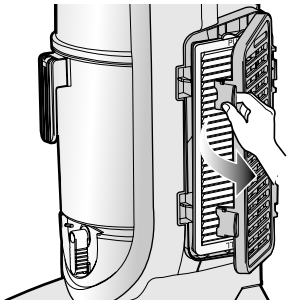

1 Débrancher votre appareil

2 Le filtre de sortie d'air HEPA aide à la filtration de l'air qui est expulsée de l'aspirateur à votre environnement. Ce filtre est situé sur le côté de l'aspirateur dans un compartiment avec un grillage le couvrant. Si le filtre devient rempli de saleté, ouvrir le compartiment et retirer le filtre et le nettoyer.

3 Replacer le filtre.

Entretien

Vérification du rouleau et de la courroie

1. Débrancher votre appareil.
2. Incliner votre aspirateur directement au plancher et tourner votre aspirateur pour que la base du balai électrique soit en vue.
3. Dévisser les 8 vis trouvées.
4. Retourner l'aspirateur et retirer le dessus du balai.
5. Dévisser les 8 vis trouvées et lever le dessus de rouleau.
6. Tenir le rouleau à chaque extrémité et lever.
7. Nettoyer le rouleau, enlever toutes les saletés trouvées incluant ceux trouvées aux extrémités du rouleau.
8. Nettoyer au niveau du moteur, poulie et la courroie.
9. Vérifier la courroie pour s'assurez qu'elle ne soit pas brisée ou étirée.
10. Vérifier le passage d'air. Nettoyer si il y a lieu.

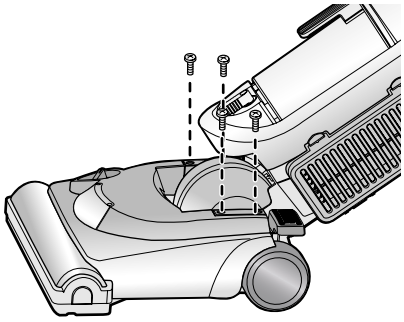

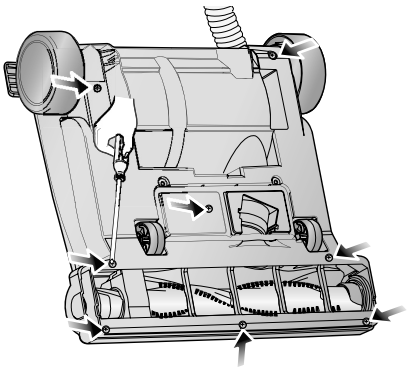

Remplacer la courroie

1. Débrancher votre appareil.
2. Ayant compléter les étapes précédentes 1-6, (Vérification du rouleau et de la courroie), retirer la courroie usée de la poulie.
3. Mettre en place la nouvelle courroie autour de la poulie et du rouleau.
4. Placer les bouts du rouleau dans les rainures tels que présenté.
5. Faire tourner le rouleau à l'aide du doigt pour ajuster la courroie.
6. Replacer le dessus du rouleau et les vis. Replacer le dessus du balai.

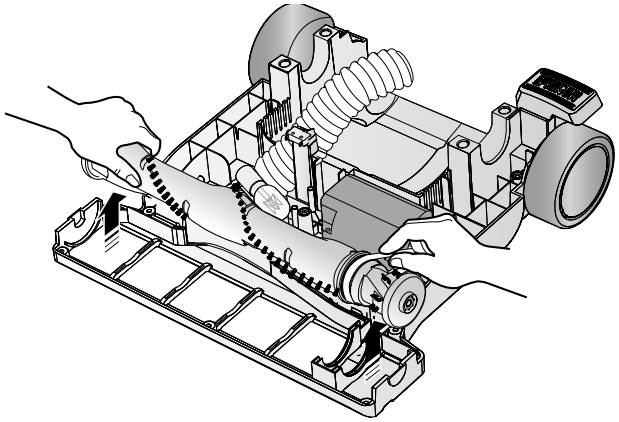

Entretien

Obstructions

Un niveau bas de succion ou un rendement faible peu être causé par une obstruction dans l'aspirateur. Si vous trouvez un changement dans le son du moteur ou une réduction au niveau de la vitesse du rouleau, arrêtez et vérifiez.

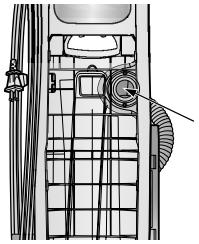

1. Débrancher l'appareil.
2. Vider le contenant de poussière.
3. Vérifier la cassette pour une obstruction.
4. Retirer la cassette du filtre et vérifier l'entrée de poussière.

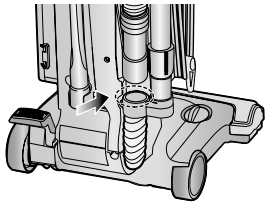

5. Retirer le boyau situé à l'arrière au bas de l'aspirateur pour vérifier si il y aurait une obstruction au niveau du tube, la base ou le boyau.
6. Enlever la vis qui retient le support du boyau et du tube. Retirer l'obstruction utilisant un objet long et étroit.

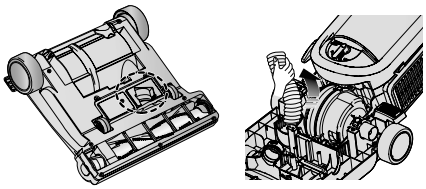

7. Débrancher l'appareil. Enlever le dessus du rouleau, vérifier le passage d'air. Enlever les débris s'il y a lieu. Replacer le dessus du rouleau et les 8 vis.

Remplacer l'ampoule

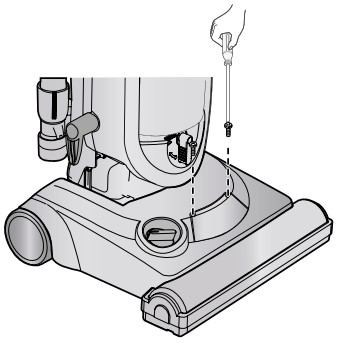

1. Débrancher l'appareil.
2. Dévisser les deux vis trouver de chaque côté de la fenêtre de la lumière.
3. Retirer l'ampoule brûlée. Insérer une nouvelle ampoule.
4. Replacer les languettes. Replacer la fenêtre de la lumière en place.
5. Visser.

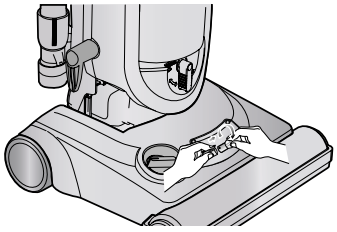

Entretien

Balai à air

*Remplacer le rouleau

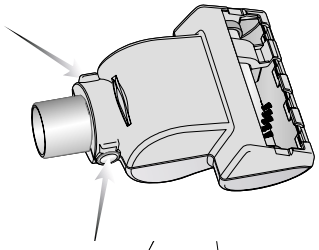

1 Retirer le balai à air du tube et placer en sorte que le dessous est exposé. Appuyer sur les agrafes de chaque côté et retirer la base du balai.

2 Enlever le rouleau incluant les embouts.

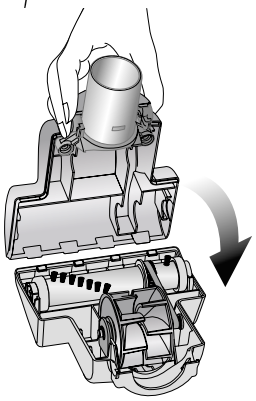

3 Vérifier la condition de la courroie. Si la courroie est craquée, étirée ou brisée, veuillez la remplacer (voir section suivante).

4 Avec les embouts courbés vers le bas, glisser les embouts du rouleau dans son compartiment.

5 Replacer la base du balai en insérant les 4 languettes à la bordure du balai. Refermer.

*Remplacer la courroie

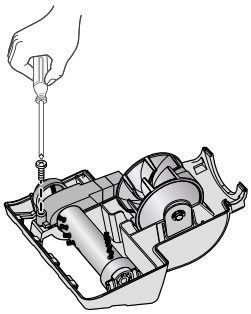

1 Prendre la turbine et retirer la courroie.

2 Remplacer par la nouvelle courroie.

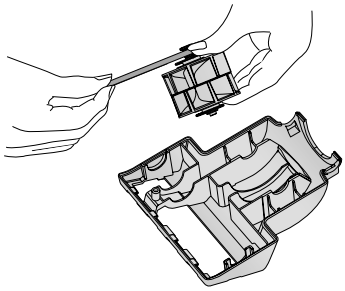

3 Avec les côtés plats des languettes de la turbine pointées vers le bas, glisser les languettes dans les rainures du compartiment.

4 Replacer le rouleau et la plaque de base.

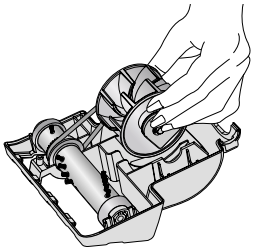

Accessoires optionnels

Pour les filtres, courroies et autres pièces, veuillez communiquer avec votre magasin autorisé Samsung le plus près de chez-vous.

ARTICLE	DESCRIPTION DE LA PIECE	NO. DE PIECE
①	Rouleau	DJ66-000298
②	courroie	6602-001223
③	ampoule	4713-001068
④	filtre HEPA	DJ63-00338
⑤	Cassette filtre	DJ61-00576
⑥	balai à air	DJ67-00285A
⑦	tube	DJ62-00113A
⑧	tube à friction	DJ67-50203A
⑨	outil à coin	DJ67-50202B
⑩	brosse à épousseter	DJ67-00220
⑪	outil à divan	DJ67-00280A

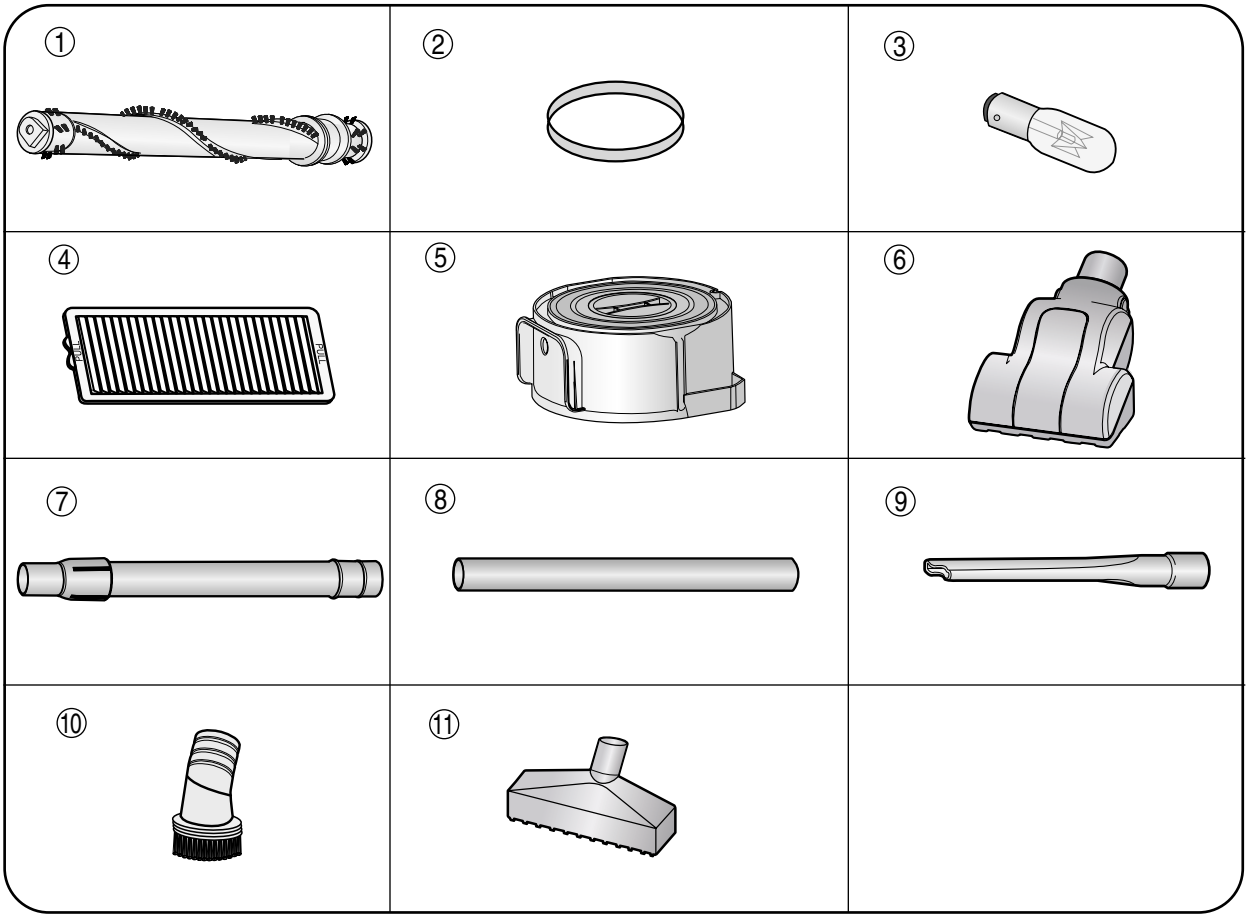

Problèmes

Veuillez consulter cette liste de situations avant de consulter un marchand autorisé Samsung.

Problème	Solution possible
ASPIRATEUR NE FONCTIONNE PAS	
• N'est pas bien branché. • Aucun voltage à la prise. • Fusible brûlée. • Interrupteur arrêt/départ ne fonctionne pas.	• Bien branché l'appareil. • Vérifier la fusible. • Remplacer la fusible. • Glisser l'interrupteur en fonction On. • Vérifier que les vis de la poignée sont bien en place.
ASPIRATEUR N'ASPIRE PAS	
• Fusible brûlée. • Rouleau est usé. • Contenant à poussière est plein. • Mauvaise élévation du rouleau. • Obstruction dans le passage d'air. • filtre pré moteur est plein de saleté. • le contenant de poussière n'est pas bien installé • obstruction dans le boyau. • courroie brisée. • Boyau inséré incorrectement.	• Remplacer la fusible. • Remplacer le rouleau. • Vider le contenant. • Ajuster le niveau du rouleau. • Vérifier le filtre cartouche hepa, nettoyez-le. • Nettoyer le filtre pré moteur. • Replacer le contenant correctement. • Enlever l'obstruction. • Remplacer la courroie. • Replacer le boyau.
LUMIÈRE NE FONCTIONNE PAS	
• Ampoule est brûlée.	• Remplacer l'ampoule.
SON ANORMAL	
• un cillement au niveau du boyau	• Vérifier le boyau pour localiser une obstruction possible